

Instructions (Ommit to the KD-LX1)

JVC



CD RECEIVER

KD-LX3

ENGLISH

RECEPTOR CON CD



 
KD-LX3

ESPAÑOL

RECEPTEUR CD

KD-LX3

FRANÇAIS

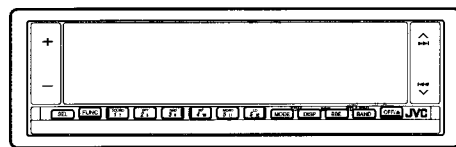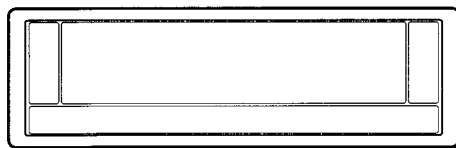

BBE®

For installation and connections, refer to the separate manual.
Para la instalación y las conexiones, refiérase al manual separado.
Pour l'installation et les raccordements, se référer au manuel séparé.



INSTRUCTIONS MANUAL DE INSTRUCCIONES MANUEL D'INSTRUCTIONS

For customer Use:

Enter below the Model No. and Serial No. which are located on the top or bottom of the cabinet. Retain this information for future reference.

Model No. _____

Serial No. _____

LVT0289-001A
[J]


Thank you for purchasing a JVC product. Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

CONTENTS

BASIC OPERATIONS	5
RADIO OPERATIONS	6
Listening to the radio	6
Searching a station automatically: Auto search	6
Searching a station manually: Manual search	7
Storing stations in memory	8
FM station automatic preset: SSM	8
Manual preset	9
Tuning into a preset station	10
CD OPERATIONS	11
Playing a CD	11
Playing a CD Text	12
Locating a track or a particular portion on a CD	13
Selecting CD playback modes	14
Prohibiting CD ejection	15
SOUND ADJUSTMENTS	16
Adjusting the sound	16
Turning on/off the BBE function	17
Selecting preset sound modes	18
Storing your own sound adjustments	19
OTHER MAIN FUNCTIONS	20
Setting the clock	20
Controlling the volume automatically (Audio Cruise)	21
Changing the general settings (PSM)	23
Assigning names to the sources	27

To be continued on the next page

How to Reset your unit

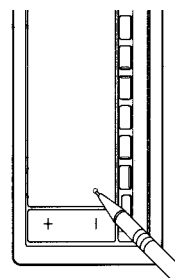

After installing the unit or when you have troubles with operations, reset the microcomputer built in this unit.

Press the reset button on the front panel using a ball-point pen or a similar tool.

- REMEMBER your preset adjustments such as preset channels or sound adjustments will also be erased from memory.


INFORMATION (For U.S.A.)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio and communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Identification and Certification labels

Bottom of the main unit

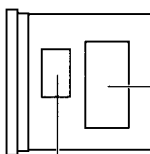

NAME/RATING PLATE

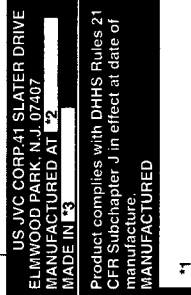

Notes:

- *1 The date of manufacture.
- *2 The ID code of manufacturing plant.
- *3 Marking of country origin.

BEFORE USE

- * For safety....
- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.

* Temperature inside the car....
If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.


IMPORTANT FOR LASER PRODUCTS (For U.S.A. only)

Precautions:

1. CLASS 1 LASER PRODUCT
2. DANGER: Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. CAUTION: Do not open the top cover. There are no user-serviceable parts inside. Leave all servicing to qualified service personnel.
4. CAUTION: This CD player uses invisible laser radiation, however, is equipped with safety switches to prevent radiation emission when unloading CDs. It is dangerous to defeat the safety switches.
5. CAUTION: Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

BASIC OPERATIONS

ENGLISH

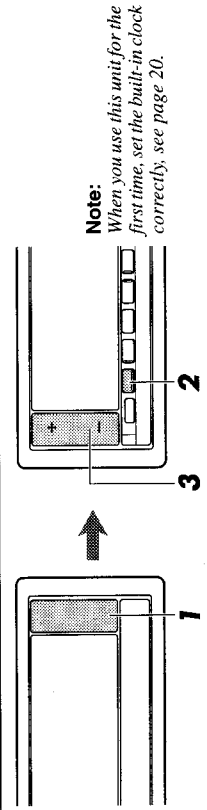


1 Turn on the power.
The display illuminates and the control panel comes out.

2 Select the source.
Each time you press the button, the source changes as described to the left:

CD → FM
LINE or
AM
CD → CD changer **

To operate the tuner, see pages 6 – 10.
To operate the CD player, see pages 11 – 15.
To operate the CD changer, see pages 32 – 35.
To operate the external component connected to the LINE IN plugs, see page 36.

Notes:
* If a CD is not in the loading slot, you cannot select CD as the source to play.
** Without connecting the CD changer, you cannot select it as the source to play.

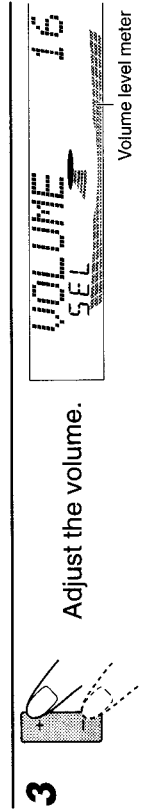

3 Adjust the volume.

4 Adjust the sound as you want (see pages 16 – 19).

To drop the volume in a moment
Press FUNC (function) for more than 1 second while listening to any source. "ATT" starts flashing on the display, and the volume level will drop in a moment.
To resume the previous volume level, press the button for more than 1 second again.

To turn off the power
Press and hold OFF/ until "SEE YOU" appears on the display.

REMOTE OPERATIONS	30
Installing the battery	30
Using the remote controller	31
CD CHANGER OPERATIONS	32
Playing CDs	32
Selecting CD playback modes	34
EXTERNAL COMPONENT OPERATIONS	36
Playing an external component	36
Using a subwoofer	36
MAINTENANCE	37
Handling CDs	37
TROUBLESHOOTING	38
SPECIFICATIONS	39

To activate "DEMO" (Demonstration)

While holding DISP, press ▲▶▶ until "DEMO" appears on the lower part of the display.
Various functions and display illumination modes equipped for this unit will be demonstrated repeatedly in sequence.

- The DEMO mode will turn off automatically after 1 hour.

To turn off the DEMO mode, press ▲▶▶ again while holding DISP until "DEMO" disappears from the lower part of the display.

How to use the number buttons:
After pressing MODE (while "MODE" remains on the display), the number buttons work as other different function buttons.

To use these buttons as number buttons after pressing MODE, wait for 5 seconds without pressing any number button so that "MODE" disappears from the display.

- Pressing MODE again also erases "MODE" from the display.

ENGLISH




RADIO OPERATIONS

Listening to the radio


You can use either automatic searching or manual searching to tune into a particular station.

Searching a station automatically: Auto search

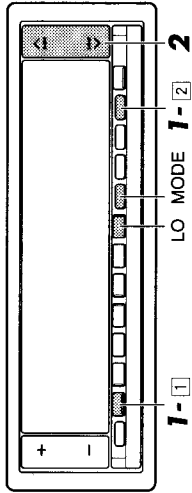

- 1**
- 1 Press FUNC to select the tuner as the source.
 - 2 Press BAND to select the band (FM1, FM2, FM3 or AM).

 Select the band.



Selected band (then clock time: see page 25) appears.

Note:
This receiver has three FM bands (FM1, FM2, FM3). You can use any one of them to listen to an FM broadcast.

- 2**
- To search stations of higher frequencies
 - To search stations of lower frequencies

Start searching a station.

When a station is received, searching stops.

To stop searching before a station is received, press the same button you have pressed for searching.

To tune in FM stations only with strong signals

This function works only while searching FM stations, including SSM preset (see page 8).


1 Press MODE.
"MODE" appears on the lower part of the display, and the number buttons can work as different function buttons.

2 Press LO (Local), while "MODE" is still on the display, so that the LOCAL indicator lights up on the display.

Each time you press the button, the LOCAL indicator lights up and goes off alternately.



Searching a station manually: Manual search

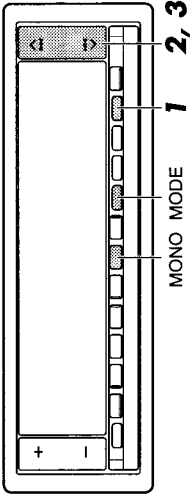


- 1**
- 1 Press BAND to select the band (FM1, FM2, FM3 or AM) you want.

Select the band (FM1, FM2, FM3 or AM) you want.

Note:
This receiver has three FM bands (FM1, FM2, FM3). You can use any one of them to listen to an FM broadcast.

 - 2**
- 1 Press and hold ▲ or ▼ until "M" (Manual) starts flashing on the display.



- 3**
- 1 Press ▲ or ▼ to tune into stations of higher frequencies
 - 1 Press ▼ or ▲ to tune into stations of lower frequencies

Tune into a station you want while "M" is flashing.

- If you release your finger from the button, the manual mode will automatically turn off after 5 seconds.

When an FM stereo broadcast is hard to receive:

1 Press MODE while listening to an FM stereo broadcast (the ST indicator lights up while receiving an FM stereo broadcast).
"MODE" appears on the lower part of the display, and the number buttons can work as different function buttons.

2 Press MONO (monaural), while "MODE" is still on the display, so that the MO indicator lights up on the display.

The sound you hear becomes monaural but reception will be improved (the ST indicator goes off).

Each time you press the button, the MO indicator lights up and goes off alternately.




Storing stations in memory

You can use one of the following two methods to store broadcasting stations in memory.

- Automatic preset of FM stations: SSM (Strong-station Sequential Memory)
- Manual preset of both FM and AM stations

FM station automatic preset: SSM

You can preset 6 local FM stations in each FM band (FM1, FM2 and FM3).

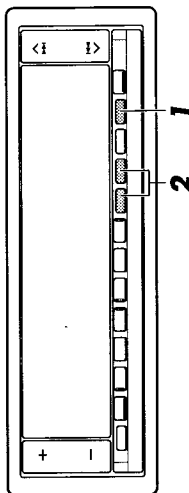


1



Select the FM band number (FM1, FM2 or FM3) you want to store FM stations into.

→ FM1 → FM2 → FM3 → AM

 2



Press and hold both buttons for more than 2 seconds.



"SSM" appears, then disappears when automatic preset is over.

Local FM stations with the strongest signals are searched and stored automatically in the band number you have selected (FM1, FM2 or FM3). These stations are preset in the number buttons — No. 1 (lowest frequency) to No. 6 (highest frequency).


When automatic preset is over, the station stored in number button 1 will be automatically tuned in.



Manual preset

You can preset up to 6 stations in each band (FM1, FM2, FM3 and AM) manually.

EXAMPLE: Storing an FM station of 88.3 MHz into the preset number 1 of the FM1 band

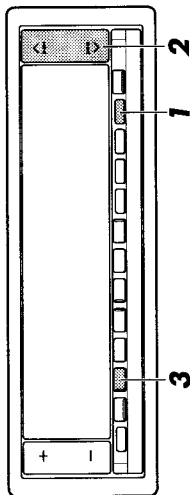


1



Select the FM1 band.

 2



Tune into a station of 88.3 MHz.
See page 6 to tune into a station.

88.3 MHz

3



Press and hold the number button (in this example, 1) for more than 2 seconds.



FM band number and "MEMO" appears alternately for a while.

MEMO

4

Repeat the above procedure to store other stations into other preset numbers.


Notes:

- A previously preset station is erased when a new station is stored in the same preset number.
- Preset stations are erased when the power supply to the memory circuit is interrupted (for example, during battery replacement). If this occurs, preset the stations again.



Tuning into a preset station

You can easily tune into a preset station. Remember that you must store stations first. If you have not stored them yet, see pages 8 and 9.

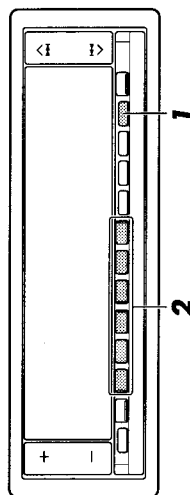


1



Select the band (FM1, FM2, FM3 or AM) you want.

 2



Select the number (1 – 6) for the preset station you want.


When using this unit in an area other than North or South America:

You need to change the AM/FM channel intervals. See "To change the AM/FM channel intervals" on page 26.



CD OPERATIONS

Playing a CD

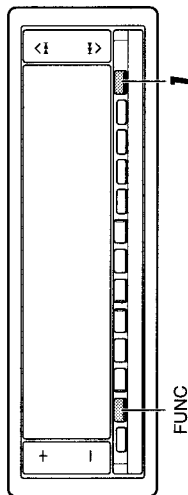


1



Open the loading slot.

The display panel moves down, and the loading slot appears.

 2



Insert a disc into the loading slot.

The unit draws a CD, the display panel moves up, and CD play starts automatically.

Total track number of the inserted disc	Total playing time of the inserted disc	Current track	Elapsed playing time
--Tr CD PLAY 18Tr	47'58"	01Tr	00'03"

Notes:

- When a CD is in the loading slot, selecting "CD" as the source by pressing **FUNC** starts CD play.
- When a CD is inserted upside down, "DISC EJECT" appears on the display and the CD automatically ejects.
- When you play a CD Text, the disc title and performer appear on the display. Then the current track and elapsed playing time appears on the display. See also "Playing a CD Text" (page 12) and "To select the scroll mode" (page 26).
- If a CD Text includes much text information, some may not appear on the display.

To stop play and eject the CD


Press **OFF/Δ** briefly.

CD play stops, the display panel moves down, then the CD automatically ejects from the loading slot.

- If you change the source, the CD play also stops (without ejecting the CD this time).

To close the display panel, press **Δ** or **Δ**.

CAUTION: NEVER insert your finger between the display panel and the unit, as it may get caught in the unit.

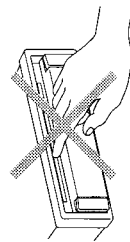


Note:

If the ejected disc is not removed for about 15 seconds, the disc is automatically inserted again into the loading slot to protect it from dust. (CD play will not start this time.)




Playing a CD Text

In a CD Text, some information about the disc (its disc title, performer and track title) is recorded. You can show these disc information on the display.

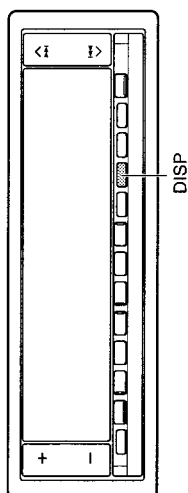

 Select text display mode while playing a CD Text.
Each time you press the button, the display changes as follows:




Notes:


- The display shows up to 12 characters at one time and scrolls if there are more than 12 characters. See also "To select the scroll mode" on page 26.
- When you press DISP while playing a conventional CD, "NO NAME" appears for the disc title/performer and the track title.




Locating a track or a particular portion on a CD

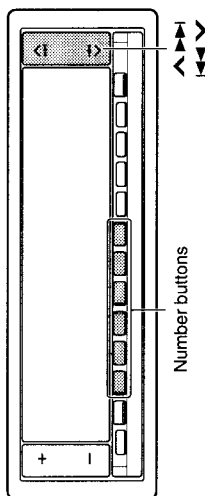

To fast-forward or reverse the track

 


 Press and hold **FF**, while playing a CD, to fast-forward the track.




Press and hold **REW**, while playing a CD, to reverse the track.

 To go to the next tracks or the previous tracks



 Press **Next** briefly, while playing a CD, to go ahead to the beginning of the next track. Each time you press the button consecutively, the beginning of the next tracks is located and played back.



Press **Prev** briefly, while playing a CD, to go back to the beginning of the current track. Each time you press the button consecutively, the beginning of the previous tracks is located and played back.

To go to a particular track directly




Press the number button corresponding to the track number to start its playback.

- To select a track number from 1 – 6:
Press 1 (7) – 6 (12) briefly.
- To select a track number from 7 – 12:
Press and hold 1 (7) – 6 (12) for more than 1 second.



ENGLISH

Selecting CD playback modes

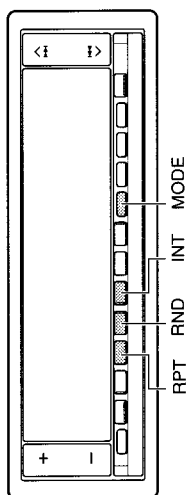

To play back tracks at random (Random Play)

You can play back all tracks on the CD at random.



1 Press MODE while playing a CD.

"MODE" appears on the lower part of the display, and the number buttons can work as different function buttons.

2 Press RND (Random), while "MODE" is still on the display, so that the RND indicator lights up on the display.

Each time you press the button, CD random play mode turns on and off alternately.

When the random mode is turned on, the RND indicator lights up on the display and a track randomly selected starts playing.



To play back tracks repeatedly (Repeat Play)

You can play back the current track repeatedly.



1 Press MODE while playing a CD.

"MODE" appears on the lower part of the display, and the number buttons can work as different function buttons.

2 Press RPT (Repeat), while "MODE" is still on the display, so that the RPT indicator lights up on the display.

Each time you press the button, CD repeat play mode turns on and off alternately.

When the repeat mode is turned on, the RPT indicator lights up on the display.

Track number of the currently playing track



ENGLISH

To play back only intros (Intro Scan)

You can play back the first 15 seconds of each track sequentially.



1 Press MODE while playing a CD.


"MODE" appears on the lower part of the display, and the number buttons can work as different function buttons.

2 Press INT (Intro), while "MODE" is still on the display.


Each time you press the button, CD intro scan mode turns on and off alternately.

When the intro scan mode is turned on, "INTRO" appears on the display for 5 seconds and the track number flashes.

Track number of the currently playing track

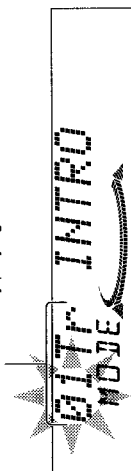

Prohibiting CD ejection

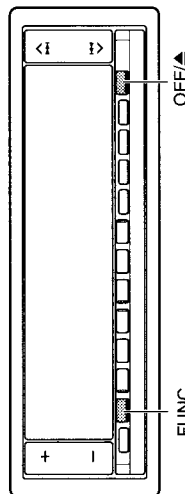

You can prohibit CD ejection and can lock a CD in the loading slot.

While pressing FUNC (Function), press and hold OFF/Δ for more than 2 seconds. "NO EJECT" flashes on the display for about 5 seconds, and the CD is locked and cannot be ejected.




To cancel the prohibition and unlock the CD, press and hold OFF/Δ for more than 2 seconds again, while pressing FUNC. "EJECT OK" flashes on the display for about 5 seconds, and the CD is unlocked.



SOUND ADJUSTMENTS

Adjusting the sound

You can adjust the sound characteristics to your preference.

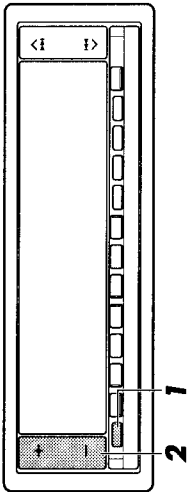

1

Select the item you want to adjust.




Indication	To do:	Range
BASS	Adjust the bass	-06 (min.) — +06 (max.)
TREBLE	Adjust the treble	-06 (min.) — +06 (max.)
FADER*	Adjust the front and rear speaker balance	R06 (Rear only) — F06 (Front only)
BALANCE	Adjust the left and right speaker balance	L06 (Left only) — R06 (Right only)
WOOFER	Adjust the subwoofer output level	00 — 08
VOLUME	Adjust the volume	00 (min.) — 50 (max.)

Note:
* If you are using a two-speaker system, set the fader level to "00."

2

 Adjust the level.



Note:
Normally + / - button works as the volume control. So you do not have to select "VOLUME" to adjust the volume level.


Turning on/off the BBE function

The BBE* function restores the brilliance and clarity of the original live sound in recording, broadcasts, etc.



When a speaker reproduces sound, it introduces frequency-dependent phase shifting, causing high-frequency sounds to take longer to reach the ear than low frequency sounds. The BBE function adjusts the phase relationship between the low, mid and high frequencies by adding a progressively longer delay time to the low and mid frequencies, so that all frequencies reach the listener's ears at the proper time.

In addition, the BBE function boosts low and high frequencies, which loudspeakers tend to be less efficient in reproducing, through dynamic, program-driven augmentation. When combined with the phase compensation feature, the resulting sound has a clearer, more finely detailed "live" presence.

* Under license from BBE Sound, Inc.
BBE is a trademark of BBE Sound, Inc.

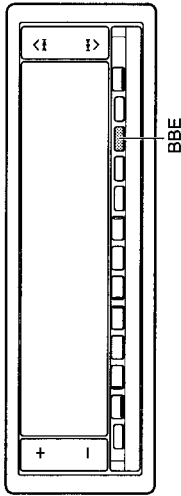


  Each time you press BBE, the BBE function turns on and off alternately.



Storing your own sound adjustments

You can adjust the sound control modes (BEAT, SOFT, POP; see page 18) to your preference and store your own adjustments in memory.

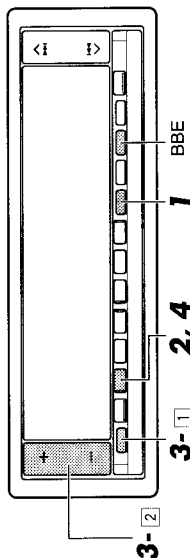

1

Light "MODE" on the lower part of the display.
The number buttons can work as different function buttons.

REMEMBER you must finish the following steps while "MODE" is still on the display. Otherwise, the setting will be canceled.

2

Select the sound control mode (SCM) you want.
For details, see page 18.

3

To adjust the bass or treble level
1 Select "BASS" or "TREBLE."
2 Adjust the bass or treble level.

To turn on or off the BBE function
See page 17.

4

Press and hold SOUND.

Your adjustment made for the selected sound control mode is stored in memory.

5


Repeat the same procedure to adjust other items.

To reset to the factory settings

Repeat the same procedure and reassign the preset values listed in the table on page 18.

Selecting preset sound modes

You can select a preset sound adjustment suitable to the music genre.

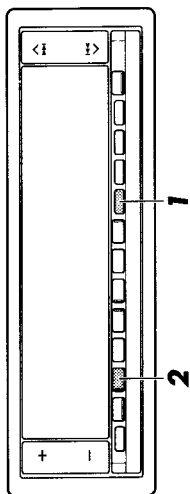

1

Light "MODE" on the lower part of the display.
The number buttons can work as different function buttons.

Within
5 seconds

2

Select the sound control mode (SCM) you want.

Each time you press SOUND, the sound control mode (SCM) changes as follows.


→ SCM BEAT → SCM SOFT → SCM POP → SCM OFF

Indication	For:	Preset values		
		Bass	Treble	BBE
SCM OFF	(Flat sound)	00	00	On
SCM BEAT	Rock or disco music	+02	00	On
SCM SOFT	Quiet background music	+01	-03	Off
SCM POP	Light music	+04	+01	Off

Notes:

- You can adjust the preset sound control mode to your preference, and store in memory. If you want to adjust and store your original sound control mode, see "Storing your own sound adjustments" on page 19.
- To adjust only the bass/treble reinforcement levels and BBE to your preference, see "Adjusting the sound" on page 16 and "Turning on/off the BBE function" on page 17.

Setting the clock

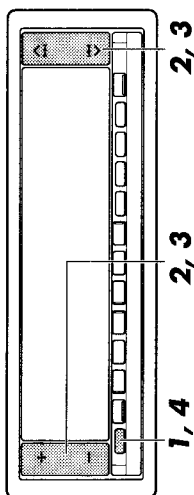

1 Press and hold SEL (Select) for more than 2 seconds so that one of the PSM items appears on the display.

2 Set the hour.
1 Select "CLOCK HOUR" if not shown on the display.
2 Adjust the hour.

3 Set the minute.
1 Select "CLOCK MINUTE."
2 Adjust the minute.


4 Finish the setting.

To check the current clock time while the unit is turned off, press + or -.
 The power turns on, the clock time is shown for 5 seconds, then the power turns off.

Controlling the volume automatically (Audio Cruise)

You can select the proper cruise mode for your car. This unit change the volume level automatically (at 3 possible levels) based on the driving speed of your car by detecting the alternator's generating frequency (Audio Cruise). If you want to use this mode, follow the procedures below. When shipped from the factory, this mode is set to "CRUISE OFF."

- CRUISE 1: Select this if your car is relatively quiet.
- CRUISE 2: Select this if your car is relatively loud.
- CRUISE OFF: Cancels Audio Cruise.

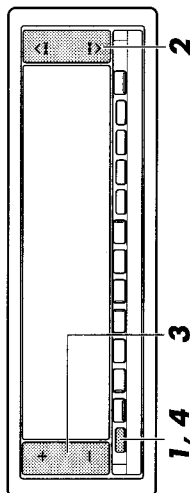

1 Press and hold SEL (Select) for more than 2 seconds so that one of the PSM items appears on the display.

2 Select "CRUISE MODE."

3 Select desired setting.
 Each time you press the button, the Audio Cruise mode changes as follows:
 → CRUISE 1 ↔ CRUISE 2 ↔ CRUISE OFF →

4 Finish the setting.



When this function is turned on (the CRUISE indicator lights up on the display), the proper volume level is automatically selected among the 3 possible levels according to the driving speed, and the selected level is shown on the display.



To adjust the volume increase rate

If you find Audio Cruise increases (or decreases) the volume either too much or too little as the driving speed changes, you can adjust the increase rate by changing the boost level. To change it, follow the procedure below.

- 1 Press and hold SEL (Select) for more than 2 seconds so that one of the PSM items appears on the display.
- 2 Press \blacktriangle or \blacktriangledown repeatedly until "CRUISE MODE" appears on the display.
- 3 Press + or - to select either "CRUISE 1" or "CRUISE 2."
- 4 Press \blacktriangle or \blacktriangledown to select "BOOST."
- 5 The current boost level also appears on the display.
- 6 Press + or - to select the desired boost level (among 01 to 15).
- 7 Press SEL again to finish the setting.

If Audio Cruise does not function correctly

You may need to store the idling speed into memory to make Audio Cruise function correctly.

NOTICE that a number of factors, such as electric power steering, wipers, power windows, air conditioner, etc. do generate noises and, as a result, may cause Audio Cruise not to function correctly. If this is the main cause of malfunction, connect the memory backup lead (yellow lead) directly to the car battery to prevent these noises from affecting Audio Cruise.

- 1 Start the engine and let it warm up.
- 2 Press and hold SEL (Select) for more than 2 seconds so that one of the PSM items appears on the display.
- 3 Press \blacktriangle or \blacktriangledown repeatedly until "CRUISE MODE" appears on the display.
- 4 Press + or - to select either "CRUISE 1" or "CRUISE 2."
- 5 Press \blacktriangle or \blacktriangledown to select "RPM SET."
- 6 Press + or - to select the desired idling speed.
- 7 Press SEL again to finish the setting.

When the setting is complete, the unit automatically checks to see if Audio Cruise functions correctly with this new idling setting. If it does not function correctly, Audio Cruise is canceled automatically and the idling setting becomes invalid.


• If this happens, see the NOTICE above.



Changing the general settings (PSM)

You can change the items listed on the next page by using the PSM (Preferred Setting Mode) control.

Basic Procedure

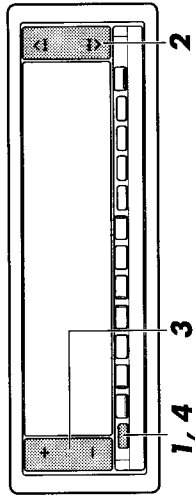

- 1 Press and hold SEL (Select) for more than 2 seconds so that one of the PSM items appears on the display.
- 2 Select the PSM item you want to adjust. (See page 24.)
- 3 Adjust the PSM item selected above.
- 4 Finish the setting.



ENGLISH

1	2	3	See page
CLOCK HOUR	Select.	Set.	
CLOCK MINUTE	Hour adjustment	Back	20
CLOCK DISP	Minute adjustment	Back	20
LEVEL METER	Clock display	CLK DISP OFF	25
DIMMER MODE	Level display	6 types (See page 25.)	25
CRUISE MODE	Dimmer mode	DIMMER AUTO ↔ DIMMER OFF	25
CRUISE MODE	Audio cruise	CRUISE 1 ↔ CRUISE 2	21
+OR- RPM SET*	Idling speed	CRUISE OFF ↔ CRUISE 1	21
BOOST*	Boost	—	22
BEEP SWITCH	Key-touch tone	BOOST 01 –15	22
P. AMP SWITCH	Power amplifier switch	BEEP OFF	25
CONTRAST	Display contrast	P. AMP OFF	26
SCROLL MODE	Scroll mode	P. AMP ON	26
WOOFER FREQ	Subwoofer cutoff frequency	CONTRAST 01 –10	26
AREA CHANGE	Channel interval	SCROLL ONCE ↔ SCROLL AUTO	26
		SCROLL OFF ↔ SCROLL ON	26
		FREQ LOW ↔ FREQ MID	26
		FREQ HIGH ↔ FREQ OFF	26
		AREA US	26
		AREA EU	26
		AREA US	26

* When you select "CRUISE 1" or "CRUISE 2" for Audio Cruise Mode, you can adjust these items.

4 Press SEL to finish the setting.

To select the clock display

You can select either the clock or the source name to be shown on the lower part of the display. When shipped from the factory, the clock is selected.

- CLK DISP ON: Clock
- CLK DISP OFF: Source name (or station band)

To check the other information during play

Press DISP (Display). Each time you press the button, the other information (either the clock or the source name) will be shown on the lower part of the display for a while.

To select the level meter

You can select the level meter display according to your preference. When shipped from the factory, "NORMAL" is selected.

- NORMAL: Normal audio level meter
- HIGHWAY: Level meter illuminates as if you are driving on a highway.
- SIDE: Level meter illuminates horizontally.
- RACE: Level meter illuminates as if cars are racing.
- LEVEL OFF: Level meter stays lit and does not change its illumination.
- ALL OFF: Level meter turns off.

To select the dimmer mode

When you turn on the car head lights, the display automatically dims (Auto Dimmer).

When shipped from the factory, Auto Dimmer mode is activated.

- DIMMER AUTO: Activates Auto Dimmer.
- DIMMER OFF: Cancels Auto Dimmer.
- DIMMER ON: Always dims the display.

Note on Auto Dimmer:

Auto Dimmer equipped with this unit may not work correctly on some vehicles, particularly on those having a control dial for dimming. "DIMMER ON" or "DIMMER OFF."

To turn on/off the key-touch tone

You can deactivate the key-touch tone if you do not want to make it beep when you press a button. When shipped from the factory, the key-touch tone is activated.

- BEEP ON: Activates the key-touch tone.
- BEEP OFF: Deactivates the key-touch tone.





To turn on/off the power amplifier switch

You can switch off the built-in amplifier and send the audio signals only to the external amplifier(s) to get clear sounds and to prevent internal heat buildup inside this unit. When shipped from the factory, the power amplifier switch is turned on so that the built-in amplifier works.

- P. AMP ON: Select this mode when not using external amplifier(s).
- P. AMP OFF: Select this mode when using external amplifier(s).

To adjust the display contrast level

You can adjust the display contrast level among 01 (dark) to 10 (bright). When shipped from the factory, the display contrast level is set at level 05.

To select the scroll mode

You can select the scroll mode for the disc information if it consists of more than 12 characters. When shipped from the factory, Auto Scroll mode is set to "SCROLL ONCE."

- SCROLL ONCE: Scrolls only once.
- SCROLL AUTO: Repeats the scroll (5-second intervals in between).
- SCROLL OFF: Cancels Auto Scroll.

Note:
Even if the scroll mode is set to "SCROLL OFF," you can scroll the display by pressing DISP for more than 1 second.

To select the subwoofer cutoff frequency

When a subwoofer is connected to this unit, select an appropriate cutoff frequency level for your subwoofer. When shipped from the factory, the subwoofer cutoff frequency is set to "MID."

- FREQ LOW: Frequencies higher than 50 Hz are cut off to the subwoofer.
- FREQ MID: Frequencies higher than 80 Hz are cut off to the subwoofer.
- FREQ HIGH: Frequencies higher than 120 Hz are cut off to the subwoofer.

To change the AM/FM channel intervals

When this unit is shipped from the factory, the channel intervals are set to 10 kHz for AM and 200 kHz for FM (AREA US settings).

You will have to change the channel intervals when using this unit in an area other than North America and South America.

- AREA EU: Select this when using this unit in an area other than North and South America. (9 kHz for AM and 50 kHz for manual tuning) / 100 kHz (for searching) for FM)
- AREA US: Select this when using this unit in North or South America. (10 kHz for AM and 200 kHz for FM)

Note:
If the channel intervals settings are changed, the names assigned to the stations will be erased from memory. To reassign the names, see "Assigning names to the sources" on pages 27 – 29.

ENGLISH




Assigning names to the sources

You can assign names to station frequencies, CDs and the external component connected to the LINE IN plugs. After assigning a name, it will appear on the display when you select the source.

Sources	Maximum number of the characters
Station frequencies	up to 12 characters (up to 30 station frequencies including both FM and AM)
CDs *	up to 32 characters (up to 40 discs)
External component	up to 12 characters


* You cannot assign a name to a CD Text.

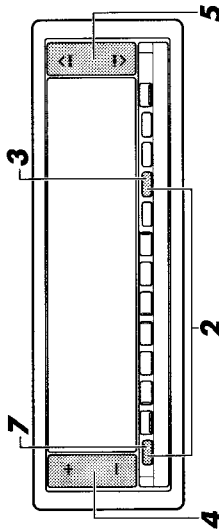


1 Select a source you want to assign a name to.

2 Press and hold SEL (Select) for more than 2 seconds while pressing DISP.

 When you select a station frequency as the source:




When you select the CD as the source:

 

When you select the external component connected to LINE IN as the source:





Continued to the next page 27

3  Select the character set you want while " " is flashing.
Each time you press the button, the character set changes as follows:


→ Capital letter → Small letter

Numbers and symbols ←

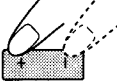4  Select a character.
About the available characters, see page 29.

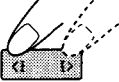5  Move the cursor to the next (or previous) character position.

 6 Repeat steps 3 to 5 until you finish inputting the name.

7  Press the button while the last selected character is flashing.
The input name is stored in memory.

To erase the input characters
Insert spaces using the same procedure described above.

Available characters

Capital letters

A	B	C	D	E	F	G	H	I	J
K	L	M	N	O	P	Q	R	S	T
U	V	W	X	Y	Z	space			

Small letters

a	b	c	d	e	f	g	h	i	j
k	l	m	n	o	p	q	r	s	t
u	v	w	x	y	z	space			

Numbers and symbols

0	1	2	3	4	5	6	7	8	9
!	"	#	\$	%	&	'	()	*
+	,	-	.	/	:	;	<	=	>
?	@	_	`	space					


Notes:

- When you assign a name to the 41st disc, "NAME FULL" appears on the display. (In this case, delete unwanted names before assignment.)
- When the CD changer CH-X1200 connected, you can assign names to CDs in CH-X1200. These names can also be shown on the display if you insert the CDs in this unit.

REMOTE OPERATIONS

Before using the remote controller:

- Aim the remote controller directly at the remote sensor on the main unit. Make sure there is no obstacle in between.
- Do not expose the remote sensor to strong light (direct sunlight or artificial lighting).

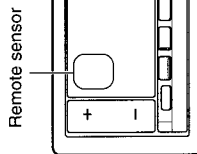


Installing the battery

When the controllable range or effectiveness of the remote controller decreases, replace the battery.


1. Remove the battery case.

- 1) Push in the direction indicated by the arrow with your right hand thumbnail.
- 2) Remove the battery case.

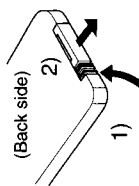


2. Replace the battery.

- Put the battery in the case with the + side facing upwards.

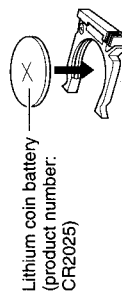

3. Return the battery case.

 - Insert again the battery case pushing until you hear a clicking sound.




WARNING:

- Store the batteries in a place which children cannot reach.
- If a child accidentally swallows the battery, immediately consult a doctor.
- Do not recharge, short, disassemble or heat the batteries or dispose of in a fire.
- Doing any of these things may cause the batteries to give off heat, crack or start a fire.
- Do not leave the batteries with other metallic materials.
- Doing this may cause the batteries to give off heat, crack or start a fire.
- When throwing away or saving the batteries, wrap in tape and insulate; otherwise, it may cause the batteries to give off heat, crack or start a fire.
- Do not poke the batteries with tweezers or similar tools.
- Doing this may cause the batteries to give off heat, crack or start a fire.

ENGLISH

Using the remote controller

1. Turns on the unit if pressed briefly.
2. Turns off the unit if pressed and held until "SEE YOU" appears on the display.
3. Drops the volume level for a moment if pressed briefly. Press again to resume the volume.
4. Functions as the BAND button while listening to the radio. Each time you press the button, the band changes.
5. Functions as the DISC + button while listening to the CD changer.
6. Each time you press the button, the disc number increases, and the selected disc starts playing.
7. Does not function as the PROG button.
8. Functions as the PRESET button while listening to the radio.
9. Each time you press the button, the preset station number increases, and the selected station is tuned in.
10. Functions as the DISC - button while listening to the CD changer.
11. Each time you press the button, the disc number decreases, and the selected disc starts playing.
12. Functions the same as the + / - button on the main unit.

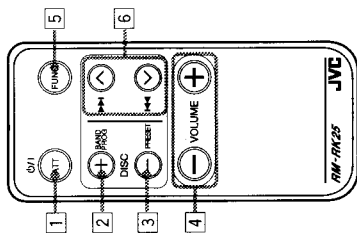

Note: This button does not function for the preferred setting mode adjustment.

13. Selects the source.
14. Each time you press FUNC (Function), the source changes.
15. Searches stations while listening to the radio.
16. Fast-forwards or reverses the track if pressed and held while listening to a CD.
17. Skips to the beginning of the next tracks or goes back to the beginning of the current (or previous tracks) if pressed briefly while listening to a CD.



CD CHANGER OPERATIONS


We recommend that you use one of the CH-X series (ex: CH-X1200) with your unit.

- If you have another CD automatic changer, consult your JVC car audio dealer for connections.
- For example, if your CD automatic changer is one of the KD-MK series, you need a cord (KS-U15K) for connecting it to this unit.

Before operating your CD automatic changer:

- Refer also to the instructions supplied with your CD changer.
- If no discs are in the magazine of the CD changer or the discs are inserted upside down, "NO DISC" will appear on the display. If this happens, remove the magazine and set the discs correctly.
- If "RESET 1 - RESET 2" appears on the display, something is wrong with the connection between this unit and the CD changer. If this happens, check the connection, connect the connecting cord(s) firmly if necessary, then press the reset button of the CD changer.

Playing CDs

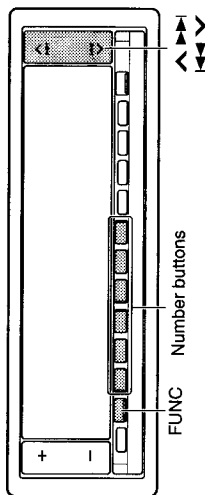


Select the CD automatic changer.

Each time you press the button, the source changes as described on page 5.

Playback starts from the first track of the first disc.

All tracks of all discs are played back.

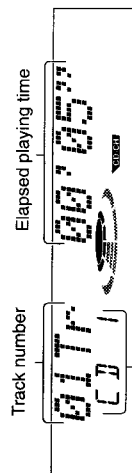


Disc number (then clock time: see page 25) appears.

Note:


When a CD is in the CD changer, selecting CD changer as the source by pressing **FUNC (Function)** source 42 (44).



 To fast-forward or reverse the track




 Press and hold **▶▶**, while playing a CD, to fast-forward the track.




Press and hold **◀◀**, while playing a CD, to reverse the track.

 To go to the next tracks or the previous tracks




 Press **▶▶** briefly, while playing a CD, to go ahead to the beginning of the next track. Each time you press the button consecutively, the beginning of the next tracks is located and played back.



Press **◀◀** briefly, while playing a CD, to go back to the beginning of the current track. Each time you press the button consecutively, the beginning of the previous tracks is located and played back.

 
To go to a particular disc directly



Press the number button corresponding to the disc number to start its playback (while the CD changer is playing).

- To select a disc number from 1 - 6:
- Press 1 (7) - 6 (12) briefly.
- To select a disc number from 7 - 12:
- Press and hold 1 (7) - 6 (12) for more than 1 second.

Ex. When disc number 3 is selected

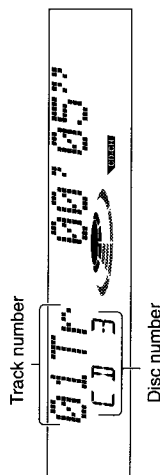

To show the CD Text information

This is possible only when connecting a JVC CD automatic changer equipped with CD Text reading capability.

See "Playing a CD Text" on page 12.



To play back only intros (Intro Scan)




- 1** Press MODE while playing a CD. "MODE" appears on the lower part of the display, and the number buttons can work as different function buttons.
- 2** Press INT (Intro), while "MODE" is still on the display. Each time you press the button, CD intro scan mode changes as follows:



Mode	Indication	Plays the beginnings (15 seconds)
INTRO 1	Track number flashes	Of all tracks on all inserted discs.
INTRO 2	Disc number flashes (when it is shown on the display)	Of the first track on each inserted disc.


Selecting CD playback modes

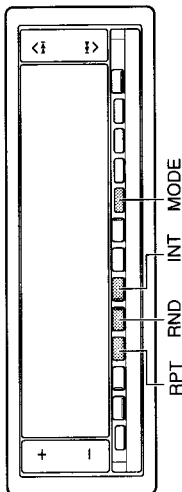

To play back tracks at random (Random Play)



 - 1 Press MODE while playing a CD. "MODE" appears on the lower part of the display, and the number buttons can work as different function buttons.
- 2 Press RND (Random), while "MODE" is still on the display, so that the RND indicator lights up on the display. Each time you press the button, CD random play mode changes as follows:



Mode	RND Indicator	Plays at random
RANDOM1	Lights	All tracks of the current disc, then the tracks of the next disc, and so on.
RANDOM2	Flashes	All tracks of all discs inserted in the magazine.

To play back tracks repeatedly (Repeat Play)



- 1 Press **MODE** while playing a CD. "MODE" appears on the lower part of the display, and the number buttons can work as different function buttons.
 - 2 Press **RPT** (Repeat), while "MODE" is still on the display, so that the **RPT** indicator lights up on the display.
- Each time you press the button, CD repeat play mode changes as follows:




Mode	RPT Indicator	Plays repeatedly
REPEAT1	Lights	The current track (or specified track).
REPEAT2	Flashes	All tracks of the current disc (or specified disc).

EXTERNAL COMPONENT OPERATIONS

Playing an external component

When connecting an external component to the LINE IN plugs on the rear, you can select the component as the sound source.

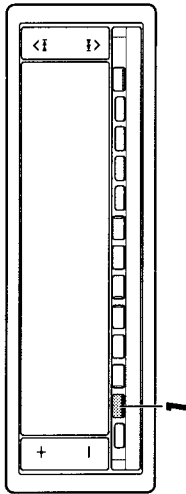

1

Select the external component.

Each time you press the button, the source changes as described on page 5.

2

Operate the external component.

Notes:

- For the external component connection, see the *Installation/Connection Manual* (separate volume).
- See also "Assigning names to the sources" on page 27 if you want to match the name shown on the display with the name of the connected component.

Using a subwoofer

By connecting a subwoofer to the SUBWOOFER OUT plugs on the rear, you can enjoy enhanced bass sounds and a more realistic theater atmosphere in your car.

- Refer also to the instructions supplied with your subwoofer.

To set the subwoofer cutoff frequency, see "To select the subwoofer cutoff frequency" on page 26.

To adjust the subwoofer output volume, see "Adjusting the sound" on page 16.

MAINTENANCE

Handling CDs

This unit has been designed only to reproduce the CDs bearing the  and  marks. Other discs cannot be played back.


How to handle CDs

When removing a CD from its case, press down the center holder of the case and lift the CD out, holding it by the edges.

- Always hold the CD by the edges. Do not touch its recording surface.

When storing a CD into its case, gently insert the CD around the center holder (with the printed surface facing up).

- Make sure to store CDs into the cases after use.

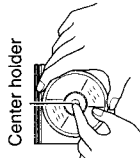

To keep CDs clean

A dirty CD may not play correctly. If a CD does become dirty, wipe it with a soft cloth in a straight line from center to edge.



To play new CDs

New CDs may have some rough spots around the inner and outer edges. If such a CD is used, this unit may reject the CD.

To remove these rough spots, rub the edges with a pencil or ball-point pen, etc.



Moisture condensation

Moisture may condense on the lens inside the CD player in the following cases:

- After starting the heater in the car.
 - If it becomes very humid inside the car.
- Should this occur, the CD player may malfunction. In this case, eject the CD and leave the unit turned on for a few hours until the moisture evaporates.

CAUTIONS:

- Do not insert 8cm (3 3/16") CDs (single CDs) into the loading slot. (Such CDs cannot be ejected.)
- Do not insert any CD of unusual shape — like a heart or flower; otherwise, it will cause a malfunction.
- Do not expose CDs to direct sunlight or any heat source or place them in a place subject to high temperature and humidity. Do not leave them in a car.
- Do not use any solvent (for example, conventional record cleaner, spray, thinner, benzine, etc.) to clean CDs.

About mistracking:

Mistracking may result from driving on extremely rough roads. This does not damage the unit and the CD, but will be annoying.

We recommend that you stop CD play while driving on such rough roads.

❗ TROUBLESHOOTING

What appears to be trouble is not always serious. Check the following points before calling a service centre.

Symptoms	Causes	Remedies
• CD cannot be played back.	CD is inserted upside down.	Insert the CD correctly.
• CD sound is sometimes interrupted.	You are driving on rough roads.	Stop CD play while driving on rough roads.
	CD is scratched.	Change the CD.
	Connections are incorrect.	Check the cords and connections.
• Sound cannot be heard from the speakers.	The volume level is set to the minimum level.	Adjust it to the optimum level.
	Connections are incorrect.	Check the cords and connections.
• SSM (Strong-station Sequential Memory) automatic preset does not work.	Signals are too weak.	Store stations manually.
• Static noise while listening to the radio.	The antenna is not connected firmly.	Connect the antenna firmly.
• "NO DISC" appears on the display.	No CD is in the magazine.	Insert CD.
• "RESET 8" appears on the display.	This unit is not connected to a CD changer correctly.	Connect this unit and the CD changer correctly and press the reset button of the CD changer.
• "RESET 1-RESET 7" appears on the display.	_____	Press the reset button of the CD changer.
• "EJECT ERROR" appears on the display and CD cannot be ejected.	The CD player may function incorrectly.	Press and hold – of the + / – button for more than 5 seconds.
• No message appears on the display but CD cannot be ejected.		While holding ▶▶▶▶▶ , press the reset button. Release the reset button, then release ▶▶▶▶▶ . (Be careful not to drop the CD when ejecting.)
• This unit does not work at all. • The CD changer does not work at all.	The built-in microcomputer may function incorrectly due to noise, etc.	Press the reset button on the front panel. (See page 3)

ENGLISH

SPECIFICATIONS

AUDIO AMPLIFIER SECTION

Maximum Power Output:

Front: 40 watts per channel
Rear: 40 watts per channel
Continuous Power Output (RMS):
Front: 16 watts per channel into 4 Ω , 40 to 20,000 Hz at no more than 0.8 % total harmonic distortion.
Rear: 16 watts per channel into 4 Ω , 40 to 20,000 Hz at no more than 0.8 % total harmonic distortion.
Load Impedance: 4 Ω (4 to 8 Ω allowance)
Tone Control Range:
Bass: ± 10 dB at 100 Hz
Treble: ± 10 dB at 10 kHz
Frequency Response: 40 to 20,000 Hz
Signal-to-Noise Ratio: 70 dB
Line-In Level/Impedance:
1.5 V/20 k Ω load
Line-Out Level/Impedance:
4.0 V/20 k Ω load (full scale)
Output Impedance: 1 k Ω

TUNER SECTION

Frequency Range:
FM: 87.5 to 107.9 MHz
(with channel interval set to 200 kHz)
87.5 to 108.0 MHz
(with channel interval set to 50 kHz)
AM: 530 to 1,710 kHz
(with channel interval set to 10 kHz)
531 to 1,602 kHz
(with channel interval set to 9 kHz)

[FM Tuner]

Usable Sensitivity: 11.3 dBf (1.0 μ V/75 Ω)
50 dB Quieting Sensitivity:
16.3 dBf (1.8 μ V/75 Ω)
Alternate Channel Selectivity (400 kHz):
65 dB
Frequency Response: 40 to 15,000 Hz
Stereo Separation: 35 dB
Capture Ratio: 1.5 dB

[AM Tuner]

Sensitivity: 20 μ V
Selectivity: 35 dB

CD PLAYER SECTION

Type: Compact disc player
Signal Detection System: Non-contact optical pickup (semiconductor laser)
Number of channels: 2 channels (stereo)
Frequency Response: 5 to 20,000 Hz
Dynamic Range: 96 dB
Signal-to-Noise Ratio: 98 dB
Wow and Flutter: Less than measurable limit

GENERAL

Power Requirement:
Operating Voltage: DC 14.4 volts (11 to 16 volts allowance)
Grounding System: Negative ground
Allowable Operating Temperature:
0°C to +40°C (32°F to 104°F)
Dimensions (W x H x D):
Installation Size:
182 x 52 x 160 mm
(7-3/16" x 2-1/16" x 6-5/16")
Panel Size: 188 x 58 x 8 mm
(7-7/16" x 2-5/16" x 3/8")
Mass: 1.7 kg (3.8 lbs) (excluding accessories)

Design and specifications subject to change without notice.

If a kit is necessary for your car, consult your telephone directory for the nearest car audio speciality shop.



 
ENGLISH

JVC



CD RECEIVER
CD-RECEIVER
RECEPTEUR CD
CD-RECEIVER

KD-LX3R

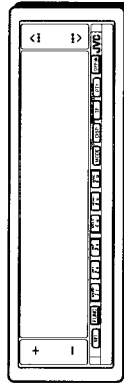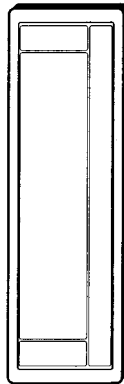

DBE

For installation and connections, refer to the separate manual.
 Angaben zu Einbau und Verkabelung entnehmen Sie bitte der gesonderten Anleitung.
 Pour l'installation et les raccordements, se référer au manuel séparé.
 Zie de afzonderlijke handleiding voor details aangaande het installeren en verbinden van het toestel.

INSTRUCTIONS
 BEDIENUNGSANLEITUNG
 MANUEL D'INSTRUCTIONS
 GEBRUIKSAANWIJZING

LVT0239-001A [E]

RDS OPERATIONS

ENGLISH

What you can do with RDS EON

RDS (Radio Data System) allows FM stations to send an additional signal along with their regular program signals. For example, the stations send their station names, as well as information about what type of program they broadcast, such as sports or music, etc. Another advantage of RDS function is called "EON (Enhanced Other Networks)." The EON indicator lights up while receiving an FM station with the EON data. By using the EON data sent from a station, you can tune into a different station of a different network broadcasting your favorite program or traffic announcement while listening to another program or to another source such as CD.

By receiving the RDS signals, this unit can do the following:

- Tracing the same program automatically (Network-tracking Reception)
- Standby Reception of TA (Traffic Announcement) or your favorite program
- PTY (Program Type) search
- TA (Traffic Announcement) search
- And some other functions

Tracing the same program automatically (Network-Tracking Reception)

When driving in an area where FM reception is not good, the tuner built in this unit automatically tunes in another RDS station broadcasting the same program with stronger signals. So, you can continue to listen to the same program in its finest reception, no matter where you drive. (See the illustration on the next page.)

Two types of the RDS signals are used to make Network-Tracking Reception work correctly — PI (Program Identification) and AF (Alternative Frequency) data.

Without receiving these data correctly from the RDS station you are listening to, Network-Tracking Reception will not operate.



To use **Network-Tracking Reception**, press and hold TP/RDS (Traffic Program/Radio Data System) for more than 1 second. Each time you press and hold the button, Network-Tracking Reception modes change as follows:

→ **Mode 1** → **Mode 2** → **Mode 3**



Using Standby Reception

Standby Reception allows the unit to switch temporarily to your favorite program (PTY: Program Type) and Traffic Announcement (TA) from the current source (another FM RDS station, CD, and other connected components).

Note:
Standby Reception will not work if you are listening to an AM station.

TA Standby Reception



Press TP/RDS briefly to activate TA Standby Reception.
The TP indicator either lights up or flashes on the display. (See below)

- **If you press the button while listening to an FM RDS station supporting TA signal**, the TP indicator lights up. This receiver now stands by for the TA signal reception.

- **If you press the button while listening to an FM RDS station NOT supporting TA signal**, the TP indicator flashes.

In this case, this receiver cannot stand by for TA signal reception.

To use TA Standby Reception, tune into a station supporting TA signal by pressing **▲** **▶** or **◀** **▼**. "SEARCH" (or "LOCAL SEARCH": see page 6) appears on the display, and the unit searches for a station supporting TA signal. When a station supporting the signal is tuned in, the TP indicator is lit. NOW this receiver stands by for the TA signal reception.

- **If you press the button while listening to any other source than AM;**
This unit starts searching for an FM station supporting TA signal in the background — without affecting your listening to the source currently selected. (During this background search, the TP indicator flashes.)

- The TP indicator stops flashing and remains lit when an FM station supporting TA signal is tuned in the background. This receiver now stands by for the TA signal reception.

- The TP indicator keeps flashing when an FM station supporting TA signal is NOT tuned in the background. In this case, this receiver cannot stand by for TA signal reception.

How TA Standby Reception works:

If a Traffic Announcement starts broadcasting while TA Standby Reception is activated (the TP indicator should be lit on the display), "TRAFFIC" appears and the unit tunes into the station broadcasting Traffic Announcement. The volume increases to the preset TA volume level (see page 17) and the Traffic Announcement can be heard.

To deactivate TA Standby Reception, press TP/RDS briefly again.
Each time you press the button, TA Standby Reception turns on and off.



Mode 1 (AF:on / REG:off)

Network-Tracking is activated with Regionalization set to "off."
Switches to another station within the same network when the received signals from the current station become weak.

Note:
In this mode, the program may differ from the one currently received.


Mode 2 (AF:on / REG:on)

Network-Tracking is activated with Regionalization set to "on."
Switches to another station, within the same network, broadcasting the same program when the received signals from the current station become weak.

Mode 3 (AF:off / REG:off)

Network-Tracking is deactivated.

The same program can be received on different frequencies.

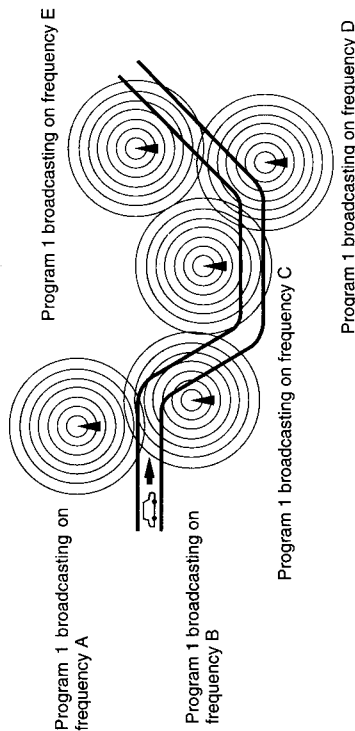



PTY Standby Reception



Press **PTY** to activate **PTY Standby Reception**.

The **PTY** indicator either lights up or flashes on the display. (See below)

- **If you press the button while listening to an FM RDS station supporting **PTY** signals**, the **PTY** indicator lights up, and the **PTY** code name (see "To select your favorite program for **PTY Standby Reception**" below) flashes for 5 seconds. This receiver now stands by for the selected **PTY** signal reception.

- **If you press the button while listening to an FM RDS station NOT supporting **PTY** signals**, the **PTY** indicator flashes, and the **PTY** code name also flashes for 5 seconds.

In this case, this receiver cannot stand by for **PTY** signal reception.

To use **PTY Standby Reception**, tune into a station supporting **PTY** signals by pressing **▲** **▶▶** or **◀◀** **▼**. "SEARCH" (or "LOCAL SEARCH"; see page 6) appears on the display, and the unit searches for a station supporting **PTY** signals. When a station supporting the signal is tuned in, the **PTY** indicator is lit. NOW this receiver stands by for the selected **PTY** signal reception.

- **If you press the button while listening to any other source than AM;** This unit starts searching for an FM station supporting **PTY** signal in the background — without affecting your listening to the source currently selected. (During this background search, the **PTY** indicator flashes.)
 - The **PTY** indicator stops flashing and remains lit when an FM station supporting **PTY** signal is tuned in the background. This receiver now stands by for the **PTY** signal reception.
 - The **PTY** indicator keeps flashing when an FM station supporting **PTY** signal is NOT tuned in the background. In this case, this receiver cannot stand by for **PTY** signal reception.

How **PTY Standby Reception** works:

If a program of the selected **PTY** starts broadcasting while the **PTY Standby Reception** is activated, the selected **PTY** name appears and the unit tunes into the station broadcasting the program. The program of the selected **PTY** can be heard.

To deactivate **PTY Standby Reception**, press **PTY** again.
Each time you press the button, **PTY Standby Reception** turns on and off.

To select your favorite program for **PTY Standby Reception**

You can select your favorite program for **PTY Standby Reception** to store in memory.

When shipped from the factory, "News" is stored for **PTY Standby Reception**.

- See also "Changing the general settings (PSM)" on page 31.

- 1 Press and hold **SEL** (Select) for more than 2 seconds so one of the **PSM** items appears on the display.
- 2 Press **▲** **▶▶** or **◀◀** **▼** to select "PTY STANDBY," if not shown on the display.
- 3 Select one of twenty-nine **PTY** codes. (See page 18.)
The selected **PTY** code name appears on the display and is stored into memory.
- 4 Press **SEL** again to finish the setting.

14




ENGLISH

Searching your favorite programme (PTY Search)

You can search one of your 6 favorite program types stored in memory. When shipped from the factory, the following 6 program types have been stored in the number buttons (1 to 6).

1	2	3	4	5	6
POP M	ROCK M	EASY M	CLASSICS	AFFAIRS	VARIED

To store your favorite program types

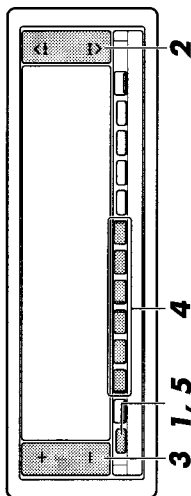

- 1 Press and hold **SEL** (Select) for more than 2 seconds so one of the **PSM** items appears on the display. (PSM: see page 31.)

- 2 Select "PTY SEARCH" if not shown on the display.

- 3 Select one of twenty-nine **PTY** codes. (See page 18.)
Selected code name appears on the display.
 - If the code already stored in memory is selected, it will flash on the display.

- 4

Press and hold the number button for more than 2 seconds to store the **PTY** code selected into the preset number you want. **PTY** preset number appears, and selected code name and "MEMORY" alternate on the display.


To be continued on the next page 15

5



Finish the setting.

To search your favorite program type

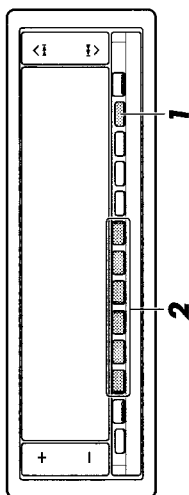

1



Press and hold PTY (Program Type) for more than 1 second while listening to an FM station.
The last selected PTY code and preset number appear.

PTY 1 POP M

2



Select one of PTY codes stored in preset number buttons (1 to 6).

PTY search for your favorite program starts after 5 seconds.

- If there is a station broadcasting a program of the same PTY code you selected, that station is tuned in.
- If there is no station broadcasting a program of the same PTY code you selected, the station will not change.

Note:

In some areas, the PTY search will not work correctly.



Other convenient RDS functions and adjustments

Automatic selection of the station when using the number buttons

Usually when you press the number button, the preset station is tuned in. However, when the preset station is an RDS station, something different will happen. If the signals from that preset station are not sufficient for good reception, this unit starts searching another station broadcasting the same program as the original preset station is broadcasting, then if any station broadcasting the same program is found, the station will be tuned in.

Changing the display mode while listening to an FM RDS station

You can change the initial indication on the display to either station name (PS) or to station frequency, while listening to an FM RDS station.

- See also "Changing the general settings (PSM)" on page 31.

- 1 Press and hold SEL (Select) for more than 2 seconds so one of the PSM items appears on the display.
- 2 Press \blacktriangle or \blacktriangleright until "TUNER DISP (Display)" appears on the display.
- 3 Press + / - to select the desired indication (either station name or station frequency).
PS NAME \longleftrightarrow FREQUENCY
- 4 Press SEL again to finish the setting.

Note:

By pressing DISP, you can also change the display while listening to an FM RDS station. Each time you press the button, the following information appears on upper part of the display:

\rightarrow PS (Station name) \rightarrow Station Frequency \rightarrow PTY (Program type)

Then, the display goes back to the original indication in several seconds.

Setting the TA volume level

You can preset the volume level for TA Standby Reception. When a traffic program is received, the volume level automatically changes to the preset level.

- See also "Changing the general settings (PSM)" on page 31.

- 1 Press and hold SEL (Select) for more than 2 seconds so that one of the PSM items appears on the display.
- 2 Press \blacktriangle or \blacktriangleright until "TA VOLUME" (with its current setting) appears on the display.
- 3 Press + / - to set to the desired volume.
- 4 Press SEL again to finish the setting.



ENGLISH

Automatic clock adjustment

When shipped from the factory, the clock built in this unit is set to be readjusted automatically using the CT (Clock Time) data in the RDS signal.

If you do not want to use automatic clock adjustment, follow the procedure below.

- See also "Changing the general settings (PSM)" on page 31.

- 1 Press and hold SEL (Select) for more than 2 seconds so one of the PSM items appears on the display.
- 2 Press \blacktriangle or \blacktriangleright until "AUTO ADJUST" appears on the display.
- 3 Press \blacktriangle to select "ADJUST OFF."
- 4 Press SEL again to finish the setting.

To reactivate clock adjustment, repeat the same procedure and select "ADJUST ON" in step 3 by pressing +.

Note:

It takes about 2 minutes to adjust the time using the CT data. So, you must tune to the station for more than 2 minutes continuously; otherwise, the clock time will not be adjusted.

PTY codes

NEWS:	News	SOCIAL:	Programs on social activities
AFAIRS:	Topical programs expanding on current news or affairs	RELIGION:	Programs dealing with any aspect of belief or faith, or the nature of existence or ethics
INFO:	Programs which impart advice on a wide variety of topics	PHONE IN:	Programs where people can express their views either by phone or in a public forum
SPORT:	Sport events	TRAVEL:	Programs about travel destinations, package tours, and travel ideas and opportunities
EDUCATE:	Educational programs	LEISURE:	Programs concerned with recreational activities such as gardening, cooking, fishing, etc.
DRAMA:	Radio plays	JAZZ:	Jazz music
CULTURE:	Programs on national or regional culture	COUNTRY:	Country music
SCIENCE:	Programs on natural science and technology	NATION M:	Current popular music from another nation or region, in that country's language
VARIED:	Other programs like comedies or ceremonies	OLDIES:	Classic pop music
POP M:	Pop music	FOLK M:	Folk music
ROCK M:	Rock music	DOCUMENT:	Programs dealing with factual matters, presented in an investigative style
EASY M:	Easy-listening music		
LIGHT M:	Light music		
CLASSICS:	Classical music		
OTHER M:	Other music		
WEATHER:	Weather information		
FINANCE:	Reports on commerce, trading, the stock market, etc.		
CHILDREN:	Entertainment programs for children		

18

SPECIFICATIONS

ENGLISH

AUDIO AMPLIFIER SECTION

Maximum Power Output:

Front: 40 watts per channel

Rear: 40 watts per channel

Continuous Power Output (RMS):

Front: 16 watts per channel into 4 Ω , 40 to 20,000 Hz at no more than 0.8 % total harmonic distortion.

Rear: 16 watts per channel into 4 Ω , 40 to 20,000 Hz at no more than 0.8 % total harmonic distortion.

Load Impedance: 4 Ω (4 to 8 Ω allowance)

Tone Control Range:

Bass: ± 10 dB at 100 Hz

Treble: ± 10 dB at 10 kHz

Frequency Response: 40 to 20,000 Hz

Signal-to-Noise Ratio: 70 dB

Line-In Level/Impedance:

1.5 V/20 k Ω

Line-Out Level/Impedance:

4.0 V/20 k Ω load (full scale)

Output Impedance: 1 k Ω

TUNER SECTION

Frequency Range:

FM: 87.5 to 108.0 MHz

AM: (MW) 522 to 1,620 kHz

(LW) 144 to 279 kHz

[FM Tuner]

Usable Sensitivity: 11.3 dBf (1.0 μ V/75 Ω)

50 dB Quieting Sensitivity:

16.3 dBf (1.8 μ V/75 Ω)

Alternate Channel Selectivity (400 kHz):

65 dB

Frequency Response: 40 to 15,000 Hz

Stereo Separation: 30 dB

Capture Ratio: 1.5 dB

[MW Tuner]

Sensitivity: 20 μ V

Selectivity: 35 dB

[LW Tuner]

Sensitivity: 50 μ V

CD PLAYER SECTION

Type: Compact disc player

Signal Detection System: Non-contact optical pickup (semiconductor laser)

Number of channels: 2 channels (stereo)

Frequency Response: 5 to 20,000 Hz

Dynamic Range: 96 dB

Signal-to-Noise Ratio: 98 dB

Wow and Flutter: Less than measurable limit

GENERAL

Power Requirement:

Operating Voltage: DC 14.4 volts (11 to 16 volts allowance)

Grounding System: Negative ground

Allowable Operating Temperature:

0°C to +40°C

Dimensions (W x H x D):

Installation Size:

182 x 52 x 160 mm

Panel Size: 188 x 58 x 8 mm

Mass: 1.7 kg (excluding accessories)


Design and specifications subject to change without notice.

55

JVC KD-LX3
KD-LX1

Installation/Connection Manual
Manual de instalación/conexión
Manuel d'installation/raccordement

LVT0224-001B
[J]

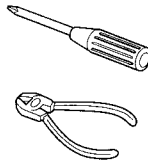

Printed in Japan
0399MNMMDWOZK
EN, SP, FR

ENGLISH

- This unit is designed to operate on 12 volts DC, NEGATIVE ground electrical systems.

INSTALLATION
(IN-DASH MOUNTING)

- The following illustration shows a typical installation. However, you should make adjustments corresponding to your specific car. If you have any questions or require information regarding installation kits, consult your JVC car audio dealer or a company supplying kits.

ESPAÑOL

- Esta unidad está diseñada para funcionar con 12 voltios de CC, con sistemas eléctricos de masa NEGATIVA.

INSTALACION (MONTAJE EN EL
TABLERO DE INSTRUMENTOS)

- La siguiente ilustración muestra una instalación típica. Sin embargo usted deberá efectuar los ajustes correspondientes a su automóvil. Si tiene alguna pregunta o necesita información acerca de las herramientas para instalación, consulte con su concesionario de JVC de equipos de audio para automóviles o a una compañía que suministra tales herramientas.

FRANÇAIS

- Cet appareil est conçu pour fonctionner sur des sources de courant continu de 12 volts à masse NEGATIVE.

INSTALLATION
(MONTAGE DANS LE TABLEAU DE BORD)

- L'illustration suivante est un exemple d'installation typique. Cependant, vous devez faire les ajustements correspondant à votre voiture particulière. Si vous avez des questions ou avez besoin d'information sur des kits d'installation, consultez votre revendeur d'autoradios JVC ou une compagnie d'approvisionnement.

- 1 Remove the trim plate.
 - 2 Remove the sleeve after disengaging the sleeve locks.
 - ① Stand the unit.

Note: When you stand the unit, be careful not to damage the fuse on the rear.

 - ② Insert the 2 handles between the unit and the sleeve, as illustrated, to disengage the sleeve locks.
 - ③ Remove the sleeve.

Note: Be sure to keep the handles for future use after installing the unit.
 - 3 Attach the trim plate.
 - 4 Install the sleeve into the dashboard.

* After the sleeve is correctly installed into the dashboard, bend the appropriate tabs to hold the sleeve firmly in place, as illustrated.
 - 5 Fix the mounting bolt to the rear of the unit's body and place the rubber cushion over the end of the bolt.
 - 6 Do the required electrical connections.
 - 7 Slide the unit into the sleeve until it is locked by pressing the four corners of the trim plate.
- Note:** Do not press the panel (shaded in the illustration); otherwise the panel may become unable to open or close.

- 1 Retire la plaque de garnición.
 - 2 Retire la manga después de desenganchar los retenes de la manga.
 - ① Ponga la unidad vertical.

Nota: Al poner la unidad vertical, tenga cuidado de no dañar el fusible provisto en la parte posterior.

 - ② Inserte las dos asas entre la unidad y la manga tal como en la ilustración y desenganche los retenes de la manga.
 - ③ Retire la manga.

Nota: Después de instalar la unidad, asegúrese de guardar las asas para uso futuro.
 - 3 Instale la placa de garnición.
 - 4 Instale la cubierta en el tablero de instrumentos.

* Después de que la manga esté correctamente instalada en el tablero de instrumentos, doble las lengüetas correspondientes para sostener la manga firmemente en su lugar, tal como se muestra.
 - 5 Fije el perno de montaje en la parte trasera del cuerpo de la unidad y coloque el cojin de goma sobre el extremo del perno.
 - 6 Realice las conexiones eléctricas requeridas.
 - 7 Deslice la unidad dentro de la manga hasta que quede bloqueada al presionar contra las cuatro esquinas de la placa de garnición.
- Nota:** No presione el panel (sombreado en la ilustración); de lo contrario, podría suceder que no se pueda realizar su apertura o cierre.


- 1 Retirer la plaque d'assemblage.
 - 2 Libérer les verrous du manchon et retirer le manchon.
 - ① Poser l'appareil à la verticale.

Remarque: Lorsque vous mettez l'appareil à la verticale, faire attention de ne pas endommager le fusible situé sur le fond.


 - ② Insérer les 2 poignées entre l'appareil et le manchon comme indiqué pour désengager les verrous de manchon.
 - ③ Retirer le manchon.

Remarque: S'assurer de garder les poignées pour une utilisation ultérieure, après l'installation de l'appareil.
 - 3 Fixez la plaque d'assemblage.
 - 4 Installer le manchon dans le tableau de bord.

* Après installation correcte du manchon dans le tableau de bord, plier les bonnes pattes pour maintenir fermement le manchon en place, comme montré.
 - 5 Monter le boulon de montage sur l'arrière du corps de l'appareil puis passer l'amortisseur en caoutchouc sur l'extrémité du boulon.
 - 6 Réalisez les connexions électriques.
 - 7 Faites glisser l'appareil dans le manchon jusqu'à ce qu'il soit verrouillé en appuyant sur les quatre coins de la plaque d'assemblage.
- Remarque:** N'appuyez pas sur le panneau (ombré sur l'illustration); sinon le panneau risquerait de ne pas pouvoir s'ouvrir ou se fermer.

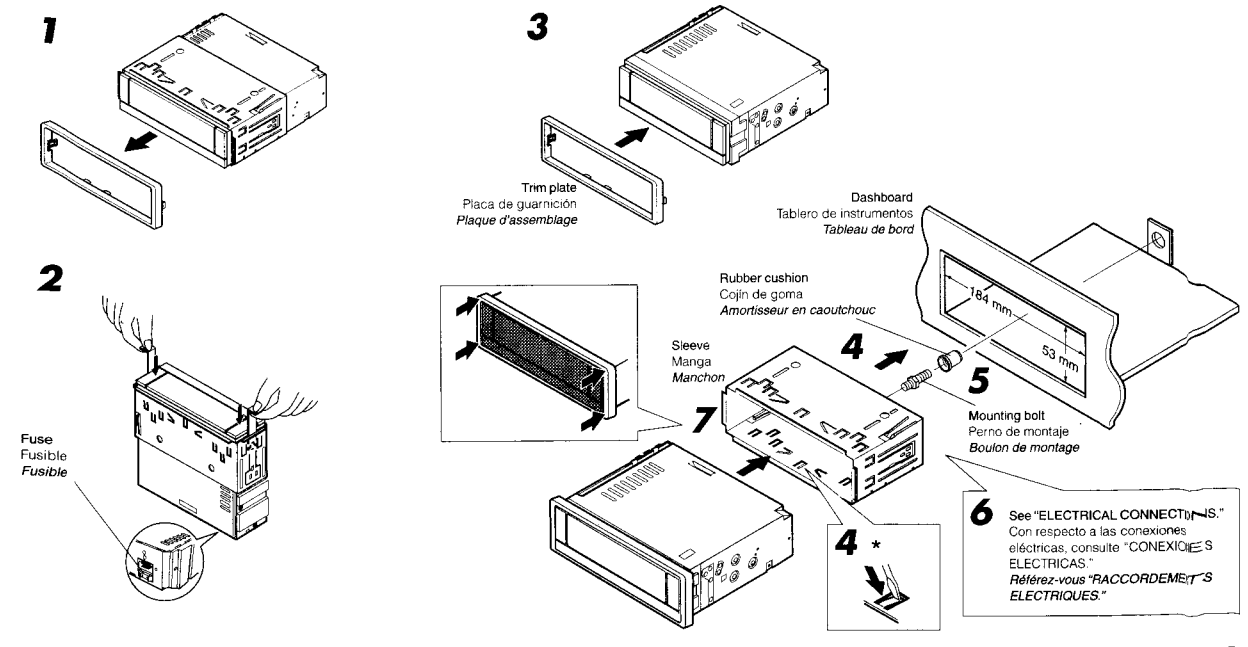

- When using the optional stay
- Cuando emplea un soporte opcional
- Lors de l'utilisation du hauban en option

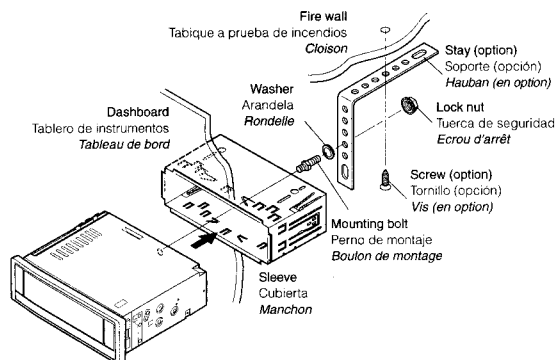


- When installing the unit without using the sleeve
- Instalación de la unidad sin utilizar la cubierta
- Lors de l'installation de l'appareil sans utiliser de manchon

In a Toyota for example, first remove the car radio and install the unit in its place. En un Toyota por ejemplo, primero extraiga la radio del automóvil y luego instale la unidad en su lugar.

Par exemple dans une Toyota, retirer d'abord l'autoradio et installer l'appareil à la place.

Flat type screws (M5 x 6 mm)*
Tornillos tipo plano (M5 x 6 mm)*
Vis à tête plate (M5 x 6 mm)*

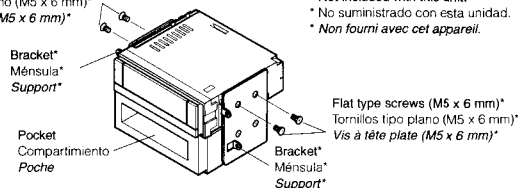

- * Not included with this unit.
- * No suministrado con esta unidad.
- * Non fourni avec cet appareil.

Note: When installing the unit on the mounting bracket, make sure to use the 6 mm-long screws. If longer screws are used, they could damage the unit.

Nota: Cuando instala la unidad en la ménsula de montaje, asegúrese de utilizar los tornillos de 6 mm de longitud. Si se utilizan tornillos más largos, éstos pueden dañar la unidad.

Remarque: Lors de l'installation de l'appareil sur le support de montage, s'assurer d'utiliser des vis d'une longueur de 6 mm. Si des vis plus longues sont utilisées, elles peuvent endommager l'appareil.

Removing the unit

- Before removing the unit, release the rear section.

- 1 Remove the trim plate.
- 2 Insert the 2 handles into the slots, as shown. Then, while gently pulling the handles away from each other, slide out the unit. (Be sure to keep the handles after installing it.)

Extracción de la unidad

- Antes de extraer la unidad, libere la sección trasera.

- 1 Retire la placa de guarnición.
- 2 Inserte las 2 manijas entre las ranuras, como se muestra. Luego, separe gentilmente las manijas y extraiga la unidad. (Asegúrese de conservar las manijas después de instalarlo.)

Retrait de l'appareil

- Avant de retirer l'appareil, libérer la section arrière.

- 1 Retirer la plaque d'assemblage.
- 2 Introduire les deux poignées dans les fentes, comme montré. Puis, tout en tirant doucement les poignées écartées, faire glisser l'appareil pour le sortir. (S'assurer de conserver les poignées après l'installation de l'appareil.)



Parts list for installation and connection

 
 

 

 
 


The following parts are provided with this unit. After checking them, please set them correctly.

Lista de piezas para instalación y conexión


Con esta unidad se suministran las siguientes piezas. Después de inspeccionarlas, colóquelas correctamente.

Liste des pièces pour l'installation et raccordement

Les pièces suivantes sont fournies avec cet appareil. Après vérification, veuillez les placer correctement.

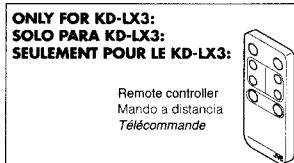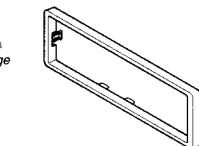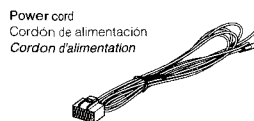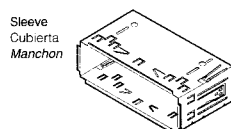

 ONLY FOR KD-LX3:
SOLO PARA KD-LX3:
SEULEMENT POUR LE KD-LX3:



CR2025

ENGLISH

 
ELECTRICAL CONNECTIONS

To prevent short circuits, we recommend that you disconnect the battery's negative terminal and make all electrical connections before installing the unit. If you are not sure how to install this unit correctly, have it installed by a qualified technician.

Note:

This unit is designed to operate on **12 volts DC, NEGATIVE ground electrical systems**. If your vehicle does not have this system, a voltage inverter is required, which can be purchased at JVC car audio dealers.

- Replace the fuse with one of the specified rating. If the fuse blows frequently, consult your JVC car audio dealer.
- If noise is a problem...
- This unit incorporates a noise filter in the power circuit. However, with some vehicles, clicking or other unwanted noise may occur. If this happens, connect the unit's **rear ground terminal** (See connection diagram.) to the car's chassis using shorter and thicker cords, such as copper braiding or gauge wire. If noise still persists, consult your JVC car audio dealer.
- Maximum input of the speakers should be more than 40 watts at the rear and 40 watts at the front, with an impedance of **4 to 8 ohms**.
- Be sure to ground this unit to the car's chassis.
- The heat sink becomes very hot after use. Be careful not to touch it when removing this unit.



ESPAÑOL

CONEXIONES ELECTRICAS

Para evitar cortocircuitos, recomendamos que desconecte el terminal negativo de la batería y que efectúe todas las conexiones eléctricas antes de instalar la unidad. Si usted no está seguro de cómo instalar correctamente la unidad, hágala instalar por un técnico cualificado.

Nota:

Esta unidad está diseñada para funcionar con **12 voltios de CC, con sistemas eléctricos de masa NEGATIVA**. Si su vehículo no posee este sistema, será necesario un inversor de tensión, que puede ser adquirido en los concesionarios de JVC de equipos de audio para automóviles.

- Reemplace el fusible por uno con la corriente especificada. Si el fusible se quemase frecuentemente consulte con su concesionario de JVC de equipos de audio para automóviles.
- Si el ruido fuese un problema...
- Esta unidad tiene un filtro de ruido en el circuito de alimentación. Sin embargo, en algunos vehículos, pueden producirse chasquidos u otros ruidos indeseados. En tal caso conecte el **terminal de tierra posterior** (Ver diagrama de conexión.) del receptor al chasis del automóvil, utilizando cordones más gruesos y cortos tales como alambre de cobre trenzado o de grueso calibre. Si el ruido persiste, consulte a su concesionario de JVC de equipos de audio para automóvil.
- La entrada máxima de los altavoces traseros debe ser mayor de 40 vatios y la de los delanteros de 40 vatios, con una impedancia de **4 a 8 ohmios**.
- Asegúrese de conectar esta unidad a tierra en el chasis del automóvil.
- El sumidero térmico estará muy caliente después del uso. Asegúrese de no tocarlo al desmontar esta unidad.

FRANÇAIS

RACCORDEMENTS ELECTRIQUES

Pour éviter tout court-circuit, nous vous recommandons de débrancher la borne négative de la batterie et d'effectuer tous les raccordements électriques avant d'installer l'appareil. Si l'on n'est pas sûr de pouvoir installer correctement cet appareil, le faire installer par un technicien qualifié.

Remarque:

Cet appareil est conçu pour fonctionner sur des sources de courant continu de **12 volts à masse NEGATIVE**. Si votre véhicule n'offre pas ce type d'alimentation, il vous faut un convertisseur de tension, que vous pouvez acheter chez un revendeur d'autoradios JVC.

- Remplacer le fusible par un de la valeur précisée. Si le fusible saute souvent, consulter votre revendeur d'autoradios JVC.
- Si le bruit est un problème...
- Cet appareil incorpore un filtre de bruit dans le circuit d'alimentation. Cependant, avec certains véhicules, quelques claquements ou autres bruits non désirés risquent de se produire. Si cela arrive, raccorder la borne de masse arrière de l'appareil au châssis de la voiture (voir le schéma de raccordement) en utilisant des cordons les plus gros et les plus courts possibles telle qu'une barre de cuivre ou une tresse. Si le bruit persiste, consulter votre revendeur d'autoradios JVC.
- La puissance admissible des haut-parleurs doit être supérieure à 40 watts à l'arrière et à 40 watts l'avant, avec une impédance de **4 à 8 ohms**.
- S'assurer de raccorder la mise à la masse de cet appareil au châssis de la voiture.
- Le radiateur devient très chaud après usage. Faire attention de ne pas le toucher en retirant cet appareil.

A Typical Connections / Conexiones típicas / Raccordements typiques

Before connecting: Check the wiring in the vehicle carefully. Incorrect connection may cause serious damage to this unit.

1 Connect the colored leads of the power cord to the car battery, speakers and power antenna (if any) in the following sequence.

- ① Black: ground
- ② Yellow: to car battery (constant 12V)
- ③ Red: to an accessory terminal
- ④ Others: to speakers
- ⑤ Blue with white stripe: to power antenna (200mA max.)
- ⑥ Orange with white stripe: to car light control switch

2 Connect the antenna cord.

3 Finally connect the wiring harness to the unit.

Antes de la conexión: Verifique atentamente el conexionado del vehículo. Una conexión incorrecta podría producir daños graves en la unidad.

1 Conecte los conductores de color del cable de alimentación a la batería del automóvil, altavoces y antena motriz (si la hubiere) en la secuencia siguiente.

- ① Negro: a tierra
- ② Amarillo: a la batería del automóvil (12V constantes)
- ③ Rojo: a un terminal de accesorio
- ④ Otros: a los altavoces
- ⑤ Azul con rayas blancas: a la antena motriz (máx. 200mA)
- ⑥ Naranja con rayas blancas: al interruptor de control de las luces del automóvil

2 Conecte el cable de antena.

3 Por último, conecte el cable de alimentación a la unidad.


Avant de commencer la connexion: vérifiez attentivement le câblage du véhicule. Une connexion incorrecte peut endommager sérieusement l'appareil.

1 Connectez les fils de couleur du cordon d'alimentation à la batterie de la voiture, aux enceintes et à l'antenne automatique (s'il y en a une) dans l'ordre suivant.

- ① Noir: à la masse
- ② Jaune: à la batterie de la voiture (12V constant)
- ③ Rouge: à la prise accessoire
- ④ Autres: aux enceintes
- ⑤ Bleu à bandes blanches: à l'antenne automatique (200 mA max.)
- ⑥ Orange à bandes blanches: à l'interrupteur d'éclairage de la voiture

2 Connectez le cordon d'antenne.

3 Finalement, connectez le faisceau de fils à l'appareil.

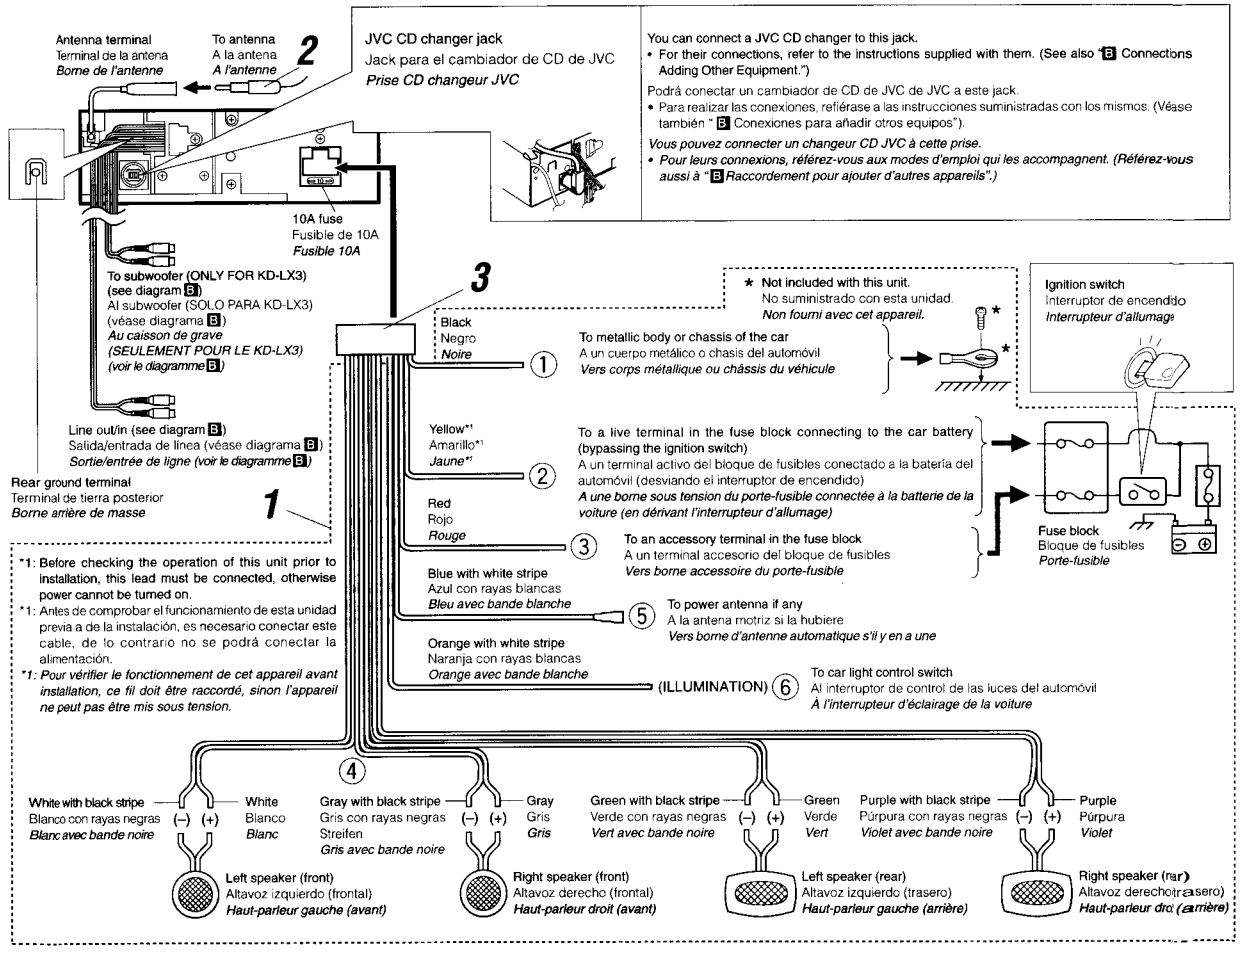

PRECAUTIONS on power supply and speaker connections:

- **DO NOT** connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.
- Connect the black lead (ground), yellow lead (to car battery, constant 12V), and red lead (to an accessory terminal) correctly.
- **BEFORE** connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.
 - If the speaker wiring in your car is as illustrated in Fig. 1 and Fig. 2 below, **DO NOT** connect the unit using that original speaker wiring. If you do, the unit will be seriously damaged. Redo the speaker wiring so that you can connect the unit to the speakers as illustrated in Fig. 3.
 - If the speaker wiring in your car is as illustrated in Fig. 3, you can connect the unit using the original speaker wiring in your car.
 - If you are not sure of the speaker wiring of your car, consult your car dealer.

 


Fig. 1

 


Fig. 2

 


Fig. 3

PRECAUCIONES sobre las conexiones de la fuente de alimentación y de los altavoces:


- **NO** conecte los conductores de altavoz del cable de alimentación a la batería de automóvil, pues podrían producirse graves daños en la unidad.
- Conecte correctamente el conductor negro (a tierra), el conductor amarillo (a la batería del automóvil, 12V constantes), y el conductor rojo (a un terminal de accesorio).
- **ANTES** de conectar a los altavoces los conductores de altavoz del cable de alimentación, verifique el conexionado de altavoz de su automóvil.
 - Si el conexionado de altavoz de su automóvil es como se indica en las Fig. 1 y 2 de abajo, **NO** conecte la unidad utilizando ese conexionado de altavoz original. Si lo hace, se producirán daños graves en la unidad. Vuelva a efectuar el conexionado de altavoz de manera que pueda conectar la unidad a los altavoces de la manera indicada en la Fig. 3.
 - Si el conexionado de altavoz de su automóvil es como se indica en la Fig. 3, podrá conectar la unidad utilizando el conexionado de altavoz original de su automóvil.
 - Si tiene dudas sobre el conexionado de altavoz de su automóvil, consulte con su concesionario.

PRECAUTIONS sur l'alimentation et la connexion des enceintes:

- **NE CONNECTEZ PAS** les fils d'enceintes du cordon d'alimentation à la batterie; sinon, l'appareil serait sérieusement endommagé.
- Connectez correctement le fil noir (à la masse), le fil jaune (à la batterie de la voiture, 12V constant) et le fil rouge à la prise accessoire).
- **AVANT** de connecter les fils d'enceintes du cordon d'alimentation aux enceintes, vérifiez le câblage des enceintes de votre voiture.
 - Si le câblage des enceintes de votre voiture est réalisé comme montré sur la Fig. 1 ou Fig. 2 ci-dessous, **NE CONNECTEZ PAS** l'appareil en utilisant ce câblage original d'enceintes. Si vous le faites, l'appareil sera sérieusement endommagé. Recommencez le câblage des enceintes de façon que vous puissiez connecter l'appareil aux enceintes comme montré sur la Fig. 3.
 - Si le câblage des enceintes de votre voiture est comme montré sur la Fig. 3, vous pouvez connecter l'appareil en utilisant ce câblage original d'enceintes pour votre voiture.
 - Si vous n'êtes pas sûrs du câblage d'enceinte de votre voiture, consultez le concessionnaire de votre voiture.


Connecting the leads / Conexión de los conductores / Raccordement des fils

Twist the core wires when connecting.
Retuerce los alambres de alma para conectarlos.
Torsader les âmes des fils en les raccordant.

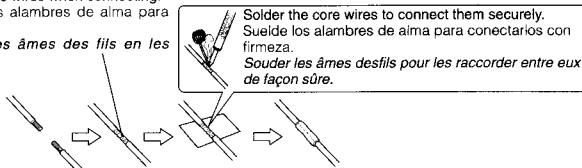

CAUTION / PRECAUTION / PRECAUTION:

 - To prevent short-circuit, cover the terminals of the UNUSED leads with insulating tape.
- Para evitar cortocircuitos, cubra los cables NO UTILIZADOS con cinta aislante.
- Pour éviter les court-circuits, couvrir les bornes des fils qui ne sont PAS utilisés avec de la bande isolante



B Connections Adding Other Equipment / Conexiones para añadir otros equipos / Raccordement pour ajouter d'autres appareils

Amplifier / Amplificador / Amplificateur

Since this unit has line-out and line-in (ONLY FOR KD-LX3) terminals, an amplifier and other equipment can be used to upgrade your car stereo system.

- Connect the remote lead (blue with white stripe) to the remote lead of the other equipment so that it can be controlled through this unit.
- For amplifier only:
 - Connect this unit's line-out terminals to the amplifier's line-in terminals.
 - Disconnect the speakers from this unit, connect them to the amplifier. Leave the speaker leads of this unit unused. (Cover the terminals of these unused leads with insulating tape, as illustrated above.)

ONLY FOR KD-LX3

- For subwoofer only:
 - Connect this unit's SUBWOOFER OUT plugs to the amplifier's line-in jacks.
- For connecting the source equipment only:
 - Connect this unit's line-in terminals to the other equipment's line-out terminals.

Como esta unidad cuenta con terminales de salida de línea y de entrada de línea (SOLO PARA KD-LX3), se podrá utilizar un amplificador y otros equipos para mejorar el sistema estereó de su automóvil.

- Conecte el conductor remoto (azul con rayas blancas) al conductor remoto del otro equipo para poderlo controlar a través de esta unidad.
- Sólo para el amplificador:
 - Conecte los terminales de salida de línea de esta unidad con los terminales de entrada de línea del amplificador.
 - Desconecte los altavoces de esta unidad y conéctelos al amplificador. Los cables de los altavoces de esta unidad quedan sin usar. (Cubra los terminales de estos cables sin usar con cinta aislante, tal como se indica en la figura de arriba.)

SOLO PARA KD-LX3

- Sólo para el subwoofer:
 - Conecte las clavijas SUBWOOFER OUT de esta unidad a los jacks de entrada de línea del amplificador.
- Para conectar el equipo fuente solamente:
 - Conecte los terminales de entrada de línea de esta unidad a los terminales de salida de línea del otro equipo.

Comme cet appareil a des bornes de sortie de ligne et d'entrée de ligne (SEULEMENT POUR LE KD-LX3), un amplificateur et d'autres appareils peuvent être utilisés pour améliorer votre chaîne stéréo automobile.


- Connectez le fil de commande à distance (bleu avec bande blanche) au fil de commande à distance de l'autre appareil de façon qu'il puisse être commandé via cet appareil.
- Pour l'amplificateur seulement:
 - Raccordez les bornes de sortie ligne de cet appareil aux bornes d'entrée ligne de l'amplificateur.
 - Déconnectez les enceintes de cet appareil et connectez-les à l'amplificateur. Laissez les fils d'enceintes de cet appareil inutilisés. (Recouvrez les extrémités de ces fils inutilisés avec de la bande isolante comme montré ci-dessus.)

SEULEMENT POUR LE KD-LX3


- Pour le caisson de grave seulement:
 - Connectez les fiches SUBWOOFER OUT de cet appareil aux prises d'entrée de ligne de l'amplificateur.
- Pour la connexion de l'appareil source uniquement:
 - Connectez les prises d'entrée de ligne de cet appareil aux prises de sortie de ligne de l'autre appareil.

CAUTION / PRECAUTIONS / PRECAUTION:

- To prevent internal heat buildup inside this unit, place this unit UNDER the other equipment.
- Para evitar el aumento del calor interior de esta unidad, póngala DEBAJO del otro equipo.
- Pour éviter un échauffement interne de cet appareil, placez-le SOUS l'autre appareil.

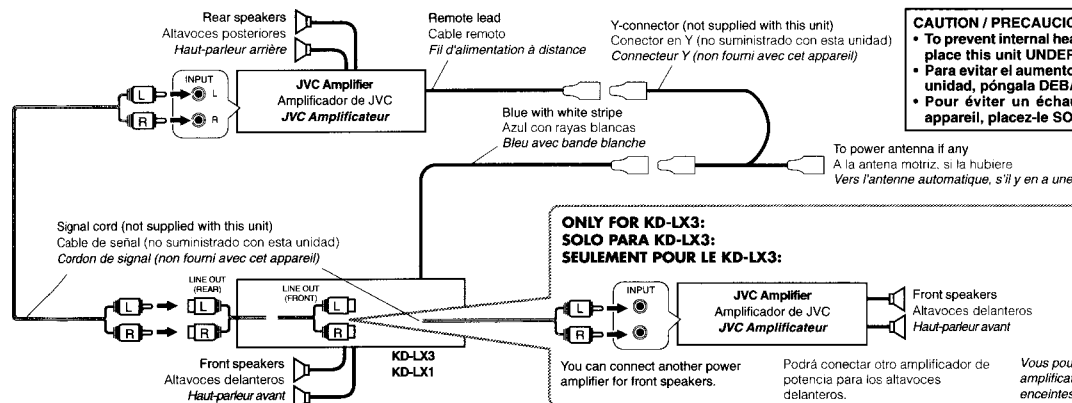

ONLY FOR KD-LX3: SOLO PARA KD-LX3: SEULEMENT POUR LE KD-LX3:

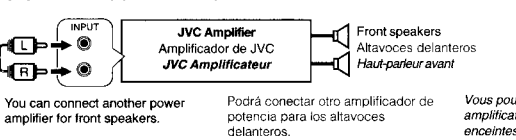

Subwoofer and other source equipment / Subwoofer y el otro equipo fuente / Caisson de grave et autre appareil source

ONLY FOR KD-LX3



For their connections, refer to the instructions supplied with each component.

SOLO PARA KD-LX3

Para las conexiones, refiérase a las instrucciones suministradas con cada componente.

SEULEMENT POUR LE KD-LX3

Pour leur connexion, référez-vous aux instructions fournies avec chaque appareil.

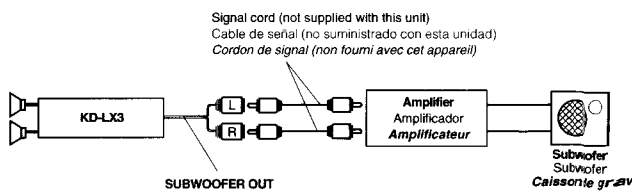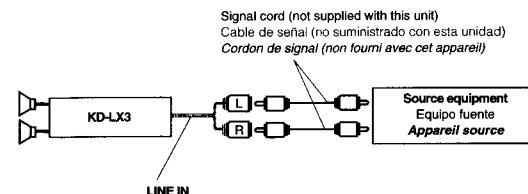

TROUBLESHOOTING

- The fuse blows.**
 - Are the red and black leads connected correctly?
- Power cannot be turned on.**
 - Is the yellow lead connected?
- No sound from the speakers.**
 - Is the speaker output lead short-circuited?
- Sound is distorted.**
 - Is the speaker output lead grounded?
 - Are the "-" terminals of L and R speakers grounded in common?
- Unit becomes hot.**
 - Is the speaker output lead grounded?
 - Are the "-" terminals of L and R speakers grounded in common?

LOCALIZACION DE AVERIAS


- El fusible se quema.**
 - ¿Están los conductores rojo y negro correctamente conectados?
- No es posible conectar la alimentación.**
 - ¿Está el cable amarillo conectado?
- No sale sonido de los altavoces.**
 - ¿Está el cable de salida del altavoz cortocircuitado?
- El sonido presenta distorsión.**
 - ¿Está el cable de salida del altavoz conectado a masa?
 - ¿Están los terminales "-" de los altavoces L y R conectados a una masa común?
- La unidad se calienta.**
 - ¿Está el cable de salida del altavoz conectado a masa?
 - ¿Están los terminales "-" de los altavoces L y R conectados a una masa común?

EN CAS DE DIFFICULTÉS

- Le fusible saute.**
 - Les fils rouge et noir sont-ils raccordés correctement?
- L'appareil ne peut pas être mis sous tension.**
 - Le fil jaune est-il raccordé?
- Pas de son des haut-parleurs.**
 - Le fil de sortie de haut-parleur est-il court-circuité?
- Le son est déformé.**
 - Le fil de sortie de haut-parleur est-il à la masse?
 - Les bornes "-" des haut-parleurs gauche et droit sont-elles mises ensemble à la masse?
- L'appareil devient chaud.**
 - Le fil de sortie de haut-parleur est-il à la masse?
 - Les bornes "-" des haut-parleurs gauche et droit sont-elles mises ensemble à la masse?

JVC

CAUTION

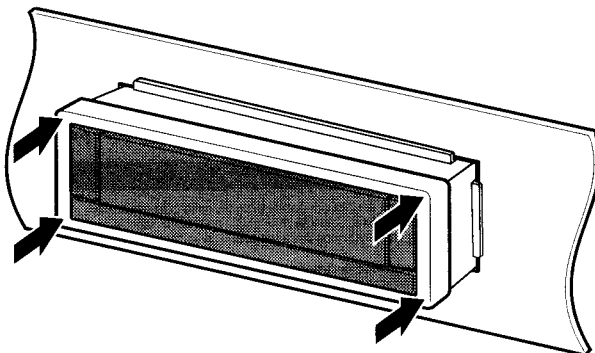

To install this unit, attach the trim plate to the unit first, then fit the unit into the mounting sleeve by pressing the four corners of the trim plate.
DO NOT press the panel (shaded in the illustration); otherwise the panel may become unable to open or close.

LVT0334-001A

JVC IMPORTANT


Notice the following information will help you solve the problems.
Keep this IMPORTANT sheet together with the INSTRUCTIONS book.

- **After installing the unit**
 - Follow the procedure [A] described below.
- **If the unit does not operate**
 - Follow the procedure [A] described below.
- **If a CD is not ejected from the loading slot**
 - ① "EJECT ERR" or "EJECT ERROR" appears on the display
 - Follow the procedure [B] described below. (If the procedure [B] does not work, try the procedure [A].)
 - ② No message appears on the display
 - Follow the procedure [C] described below.
- **If a CD is not recognized (the source does not change to the CD) even though there is a CD in the loading slot**
 - Follow the procedure [C] described below. (If the procedure [C] does not work, try the procedure [A].)

[A] To reset the microcomputer


Press the reset button on the front panel using a ball-point pen or a similar tool.
This will reset the built-in microcomputer.

NOTE: Your preset adjustments — such as preset channels or sound adjustments — will also be erased.

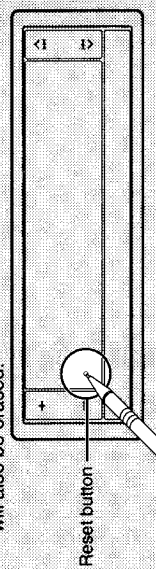


[B] To eject a CD by force

Press and hold — of the + / — button until CD ejects.

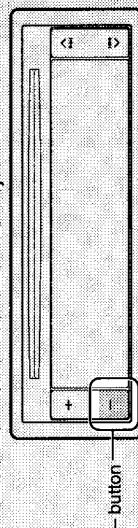

[C] To eject a CD by force

While holding ^ >>>, press the reset button, then release ^ >>>. (Be careful not to drop the CD when ejecting.)

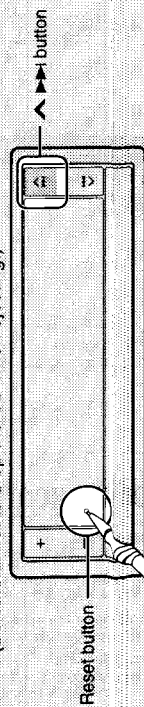

LVT0330-001A